

Resetting the Combination Lock

Handy Hint

For new users we recommend setting the code one dial at a time until you become familiar with the technique

1. Set the lock to the unlocked code (the factory default setting is 0-0-0) or your previously set personal combination.
2. There is a small hole on the side of the lock which gives access to the reset button.
Push a pin or small nail into the hole.
 - If you feel the spring of the reset button you can proceed with step 3.
 - If you do not feel the spring of the reset button, rotate the lock (this will be either fully clockwise or anticlockwise depending on your product) and try again.
3. Using the pin, press and HOLD the reset button down.

CAREFUL - DO NOT RELEASE THE RESET BUTTON UNTIL YOU HAVE SET AND MEMORISED YOUR CODE. IF YOU ACCIDENTALLY RELEASE THE RESET BUTTON THE LOCK WILL BE SET TO WHATEVER CODE YOU WERE AT.

Set your desired code (new users – set one dial at a time). Release the reset button to store your new code. Your new combination code is now set.

