

Ember Screen

F185

Contents

Your carton should contain the following parts:

- 4 x Quarter Panels
- 1 x Handle Plate
- 1 x Accessories Bag

Instructions

1. Align the mounting holes of 2 x quarter panels together. Attach these two panels using the nuts, washers and bolts provided. Leave the nuts slightly loose.
2. Repeat step 1 to attach the third quarter panel, and then the fourth quarter panel.
3. Make any adjustments to the alignment of the quarter panels before fully tightening all the nuts.
4. To fully assemble the screen, align the holes on the top of the screen with the handle plate holes. Secure together using the nuts, washers and bolts provided.

