

# INSTALLATION INSTRUCTIONS


## PILLAR - CONCRETE / SANDSTONE

### Pour a Concrete Slab


You will need:

- Ready mix Concrete (about 2 bags)
- Shovel
- Spirit Level
- Adhesive (e.g. Liquid Nails Landscape)


1. Dig a hole about 7cm deep and 45 to 50cm square.

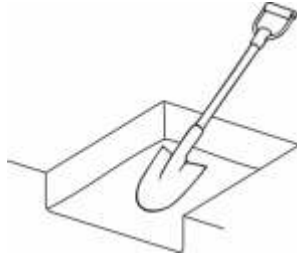

2. Fill the hole with freshly mixed concrete

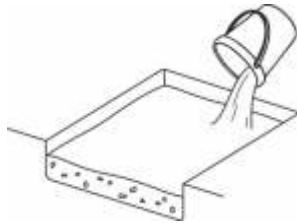


3. Level the concrete and leave until it has set

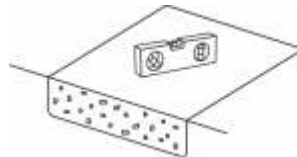

4. Apply a generous amount of adhesive such as 'Liquid Nails Landscape' to the base of the letterbox



5. Place the letterbox into position and leave until the glue has set. Your letterbox is ready to use

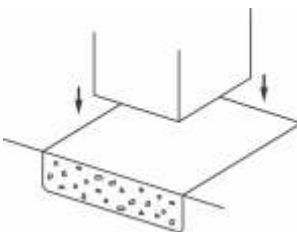


### Lay a Concrete Paver


You will need:

- Concrete Paver (approx. 45cm<sup>2</sup> square)
- Shovel
- Spirit Level
- Adhesive (e.g. Liquid Nails Landscape)


1. Dig a hole to the same depth of your paver

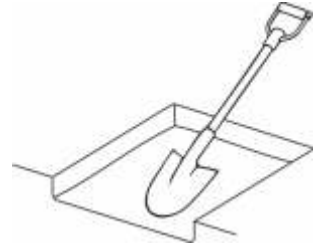

2. Place the concrete paver into the hole

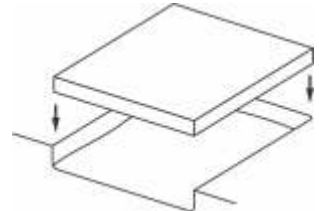


3. Ensure the paver is level

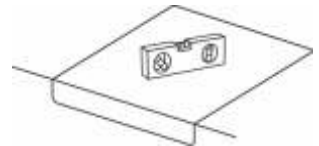

4. Apply a generous amount of adhesive such as 'Liquid Nails Landscape' to the base of the letterbox



5. Place the letterbox into position and leave until the glue has set. Your letterbox is ready to use

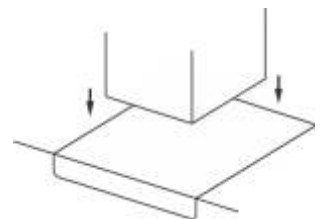

**AVOID LETTING DAMP MATERIALS SUCH AS MULCH, BARK OR SOIL BUILD UP AGAINST THE SIDE OF THE LETTERBOX**