


# INSTALLATION INSTRUCTIONS

## NUMBERS - GLASS


Please use these instructions as a general guide for all 140mm glass numerals

### Brick


1. Using the studs as a guide, pre-mark the correct position for the number(s) with a pencil. Drill two 7mm holes, 35mm deep and insert the wall plugs supplied.

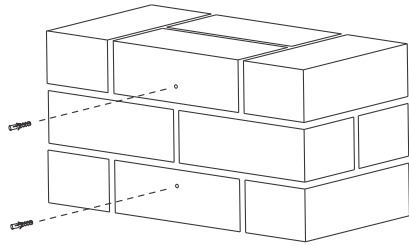

2. Insert screws provided into chrome cylinders and screw into wall plugs.

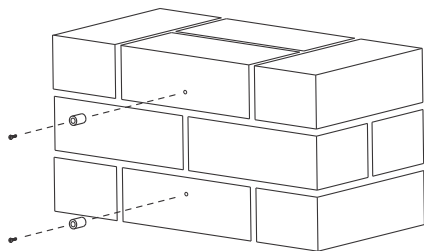


3. Align the number on top of the cylinders and screw cylinder caps through glass numeral and into cylinders screwed into wall.

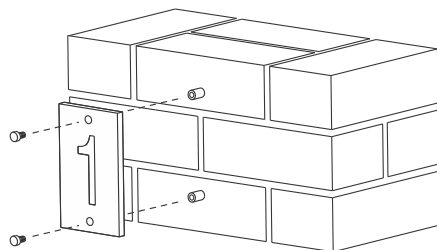


### Timber Fence

1. Using the number studs as a guide, pre-mark the correct position for the number(s) with a pencil. Drill two 2mm holes.

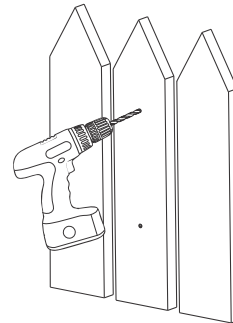

2. Insert screws provided into chrome cylinders and screw into timber fence.

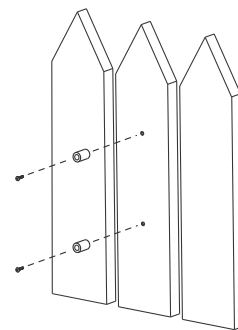

3. Align the number on top of the cylinders and screw cylinder caps through glass numeral and into cylinders screwed into fence.

