

# INSTALLATION INSTRUCTIONS


## NUMBERS - STUD MOUNT

Please use these instructions as a general guide for the following stainless steel stud numerals:

- 95mm Positive
- 110mm Negative
- 150mm Positive
- 150mm Negative


### Brick

1. Using the studs as a guide, pre-mark the correct position for the number(s) with a pencil. Drill two 7mm holes, 35mm deep and insert the wall plugs supplied (drill 50mm deep holes for flush mount).

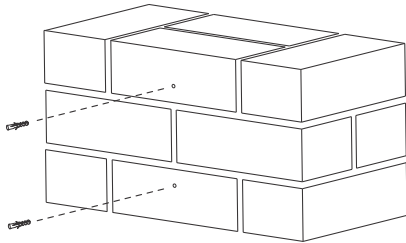


2. Using the threaded pins provided, screw into numeral studs and push numeral into wall to desired offset (i.e. floating or flush).

*If force is required to push numeral into plugs, cover numeral with cloth and gently tap with a rubber mallet.*

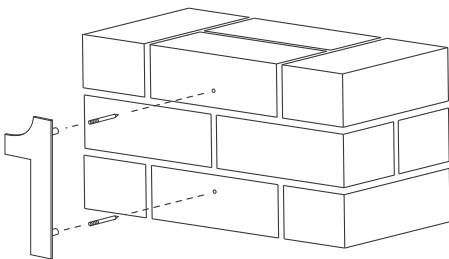

### Timber Fence

1. Using the number studs as a guide, pre-mark the correct position for the number(s) with a pencil. Drill two 5mm holes (drill 7mm holes for flush mount).

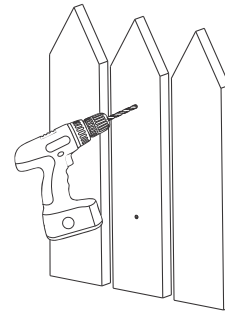

2. Attach threaded rods to numeral studs and push through holes in timber fence. Secure the numeral at back of fence with the nuts provided.

