


LISBON PARCEL LETTERBOX - LEG KIT


791L2 - Leg Kit

Congratulations on purchasing the Leg Kit to accompany the Lisbon letterbox. This Leg Kit allows the Lisbon to be installed as a stylish and convenient freestanding letterbox that is ideal for receiving large A4 size envelopes and satchels.

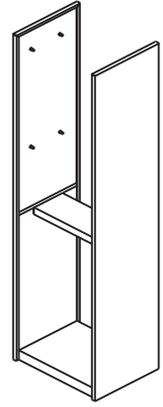


Assembly


1. Lay one of the panels on a smooth surface. Place the Lisbon letterbox over the studs as shown. Secure in place using the 4 nuts provided.

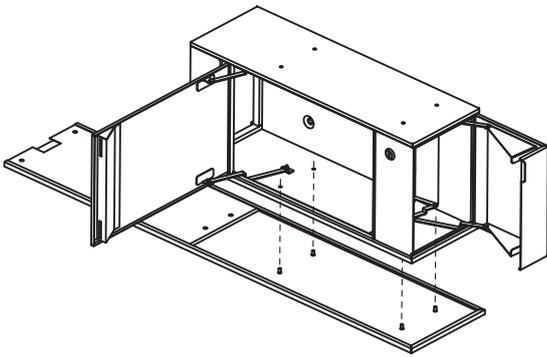



2. Repeat Step 1 for the other panel.

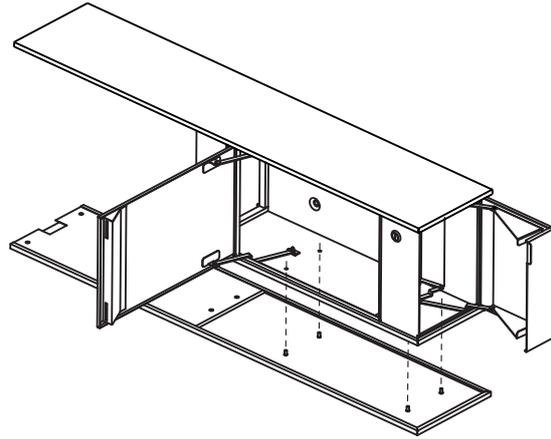

3. Stand letterbox upside down on a soft surface and attach brace with 4 x M6 Screws.

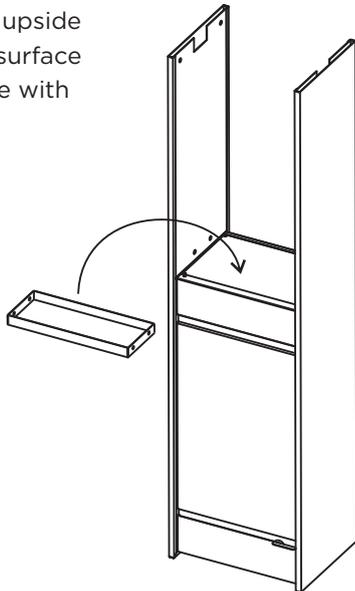

4. Fit the base plate into the ends of the side panels. Note the alignment of the base plate as shown in detail. Secure the base plate with the 4 x M6 Screws.

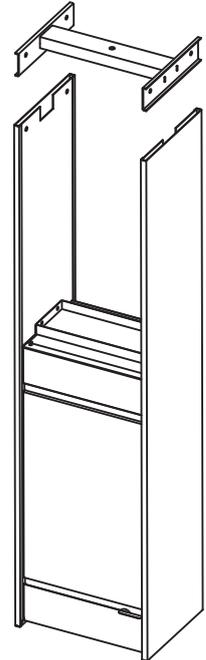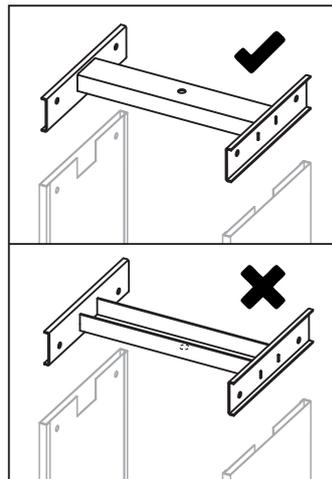


Installation


The Lisbon parcel letterbox receives parcels and general mail. You will need to mount it in a location that is easily accessible to Australia Post and couriers. This will typically be at your front boundary.

Mounting onto an existing concrete floor


1. Place your letterbox in the chosen location and mark the mounting hole with a pencil.

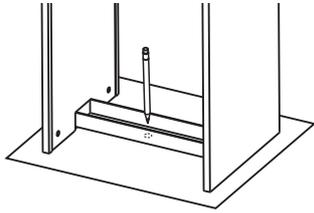


2. Drill a hole (10mm diameter x 60mm deep) into the concrete floor for the mounting bolt.

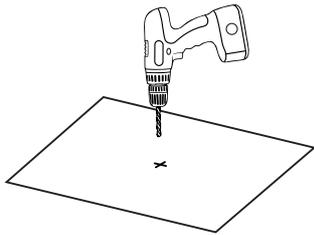

3. Place the letterbox back in position over the hole. Insert the mounting bolt through the hole in the mounting plate of the letterbox and tap it down into the concrete until the nut is touching the mounting plate. Tighten the nut with the tube spanner provided.

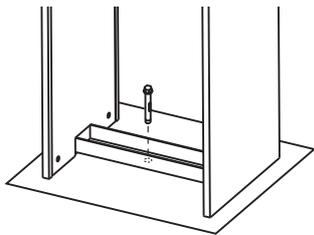


4. Place the cover plate over the base.

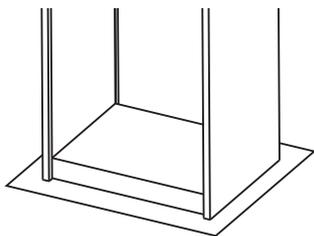

Mounting onto ground


You will need to install a small concrete slab that is suitable for your parcel letterbox to be bolted onto.

1. Dig a hole approximately 30cm x 35cm x 10cm deep.

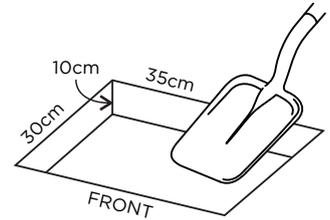


2. Fill hole with concrete.


3. Use a spirit level to level the concrete and then leave it to fully dry.

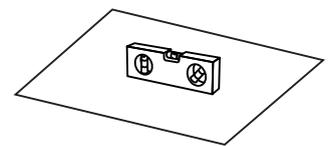


4. Place your letterbox onto the concrete slab and mark the mounting hole with a pencil.

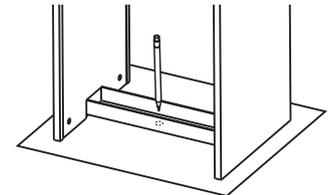

5. Drill a hole (10mm diameter x 60mm deep) into the concrete slab for the mounting bolt.

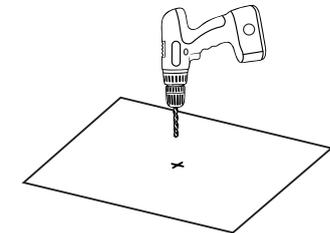

6. Place the letterbox back in position over the hole. Insert the mounting bolt through the hole in the mounting plate of the letterbox and tap it down into the concrete until the nut is touching the mounting plate. Tighten the nut with the tube spanner provided.

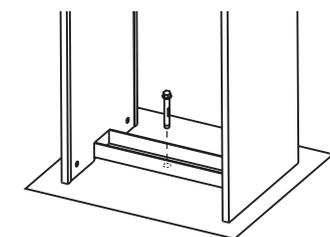

7. Place the cover plate over the base.

