


# INSTALLATION INSTRUCTIONS


1. Cut piece of 100mm PVC pipe to desired length.

Join paper holder with pipe & seal with silicone.

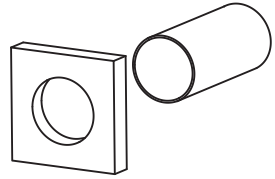

2. Build the brickwork up to the desired height and set the paper holder in place following these guidelines;

- For plain brick walls, the front and back should sit flush with the wall
- For rendered walls, set the front and back slightly forward so that they will sit flush with the finished render surface.

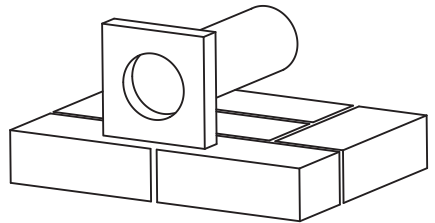

2. Complete the remaining brickwork around the paper holder.

3. Finish any brick cleaning or rendering.

