



# INSTALLATION INSTRUCTIONS

1. Cut piece of 100mm PVC pipe to desired length. Join paper holder with pipe & seal with silicone.

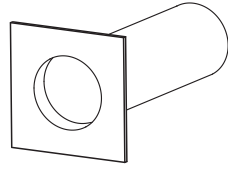

2. Build brickwork up to desired height. Cut bricks down so that the paper holder sits centre.

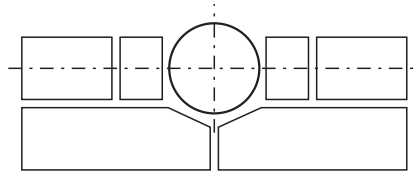

3. Complete remaining brickwork around paper holder.

