


# CARRERA LETTERBOX

Congratulations on purchasing the Carrera letterbox. We have designed this letterbox to offer a practical way to have mail delivered securely to your home.

You will need to install the Carrera letterbox in a location that is easily accessible to Australia Post and couriers. This will typically be at your front boundary.

The ideal height for the mail opening is 90 - 120cm from the ground.

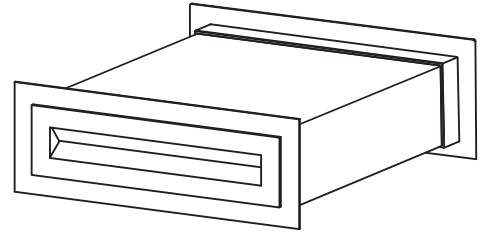

## Installing into a brick wall

If you have purchased the 144 Carrera letterbox, you will need to assemble the sleeve, front and back panels together before proceeding with step 1.

1. Build the brickwork up to the desired height and set the sleeve in place following these guidelines;

- Expand the sleeve to match the depth of your wall or pier
- For plain brick walls, the front and back panels should sit flush with the wall
- For rendered walls, set the front and back panels slightly forward so that they will sit flush with the finished render surface.

2. Complete the remaining brickwork around the letterbox.

3. Finish any brick cleaning or rendering.

