


↓ Cut out this section of fence ↓

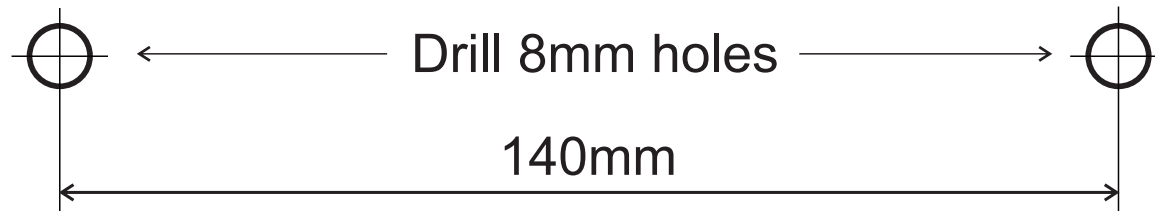

SIDE EDGE

1. Place this guide in the desired location on fence.
2. Push through the guide with a pencil to mark area to be cut and drilled.
3. Cut out the mail opening and drill two 8mm holes for the front panel mounting studs.
4. Fit the front panel so its mounting studs pass through the holes just drilled.
5. Attach the letterbox to the mounting studs through the letterbox's upper mounting holes.
6. Fit nuts to the mounting studs and tighten.
7. Finish by screwing letterbox to fence through the lower mounting holes.