

INSTALLATION INSTRUCTIONS

This instructions sheet is applicable to the following products:


- MODENA series
- HENDON series

The letterbox can be either mounted into a timber fence, or built into a brick or block wall. This product is available as a separate front panel and back box.


TIMBER FENCE INSTALLATION

1. Measure the letterbox body and cut a slightly larger hole into the fence.


The ideal height for the mail slot is 90 to 110cm from the ground, however it can be as low as 60cm.

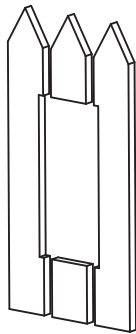

2. Slide the letterbox body in through the front of the fence. Screw it to the fence with the screws provided (for hardwood, its easier if you pre-drill the screw holes).

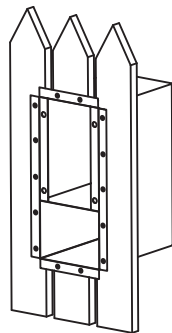


3. Attach the front panel and secure it from inside the letterbox with the nuts provided.

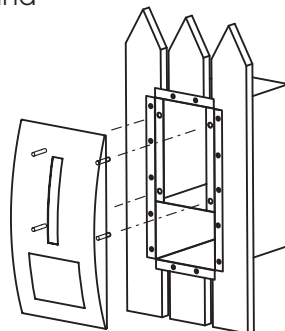


BRICK INSTALLATION

1. Build the brickwork up to the desired level and set the letterbox in place. For plain brick walls, the front flanges should sit flush with the wall. For rendered walls, set the letterbox slightly forward to allow for the render thickness.

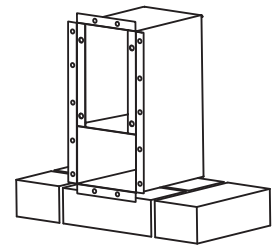

2. Complete the remaining brickwork around the letterbox.

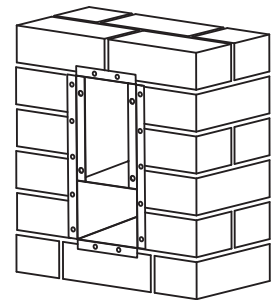

3. Once the brickwork and any rendering has been completed, attach the front panel and secure it from inside of the letterbox with the nuts provided.

