

INSTALLATION INSTRUCTIONS


This instructions sheet is applicable to the following products:

- REGENT series
- OXFORD series


The letterbox can be either mounted into a timber fence, or built into a brick or block wall. This product is available as a separate front panel and back box.

TIMBER FENCE INSTALLATION


1. Measure the letterbox body and cut a slightly larger hole into the fence, as shown.

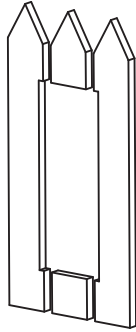

2. Slide the letterbox body in through the front of the fence. Screw it to the fence with the screws provided (for hardwood, its easier if you pre-drill the screw holes).

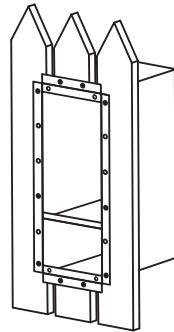


3. Attach the front panel and secure it from inside of the letterbox with nuts provided.

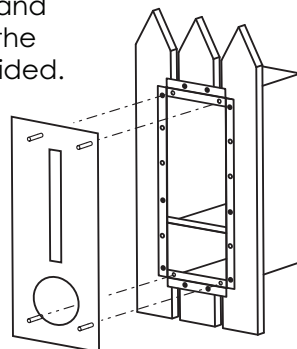


BRICK INSTALLATION

1. Build the brickwork up to the desired level and set the letterbox in place. For plain brick walls, the front flanges should sit flush with wall. For rendered walls, set the letterbox forward to allow for the render thickness.

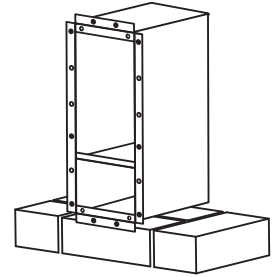

2. Complete the remaining brickwork around the letterbox.

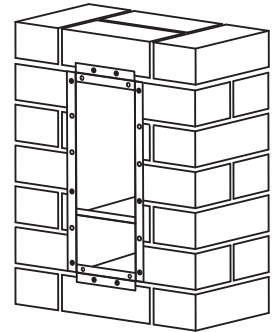

3. Once the brickwork and any rendering has been completed, attach the front panel and secure it from inside of the letterbox with nuts provided.

