


Torino Letterbox

763B2
763F3

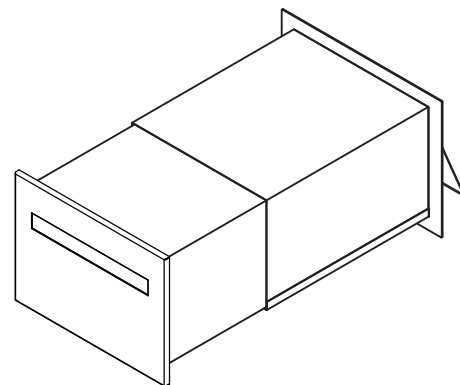

You will need to install the Torino letterbox in a location that is easily accessible to Australia Post and couriers. This will typically be at your front boundary. The ideal height for the mail opening is 90-120cm from the ground.

Installation

1. Remove the back panel from the inside of the sleeve.
2. Build the brickwork up to the desired height and set the sleeve in place following these guidelines;

IMPORTANT: STUDS MUST SIT TO LEFT SIDE OF LETTERBOX

- For plain brick walls, the front flanges should sit flush with the wall
- For rendered walls, set the front flanges so they will sit flush with the finished rendered surface.

3. Complete the remaining brickwork around the letterbox. Finish any brick cleaning or rendering.

4. Unlock the rear door and align the studs with the sleeve holes. Secure the panel using the nuts and washers provided.


5. Attach mounting bracket to the bottom two studs with the nuts provided.

6. Attach mounting clips to the top and right side of the sleeve.

Note: Steps a, b & c illustrate how to secure the mounting clips (see right).

7. Secure the front panel using the nuts provided.

MOUNTING STUDS
MUST BE ON THIS
SIDE

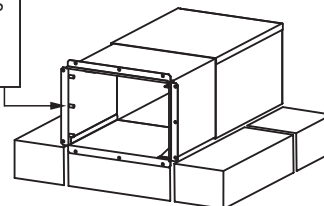

WARNING: DO NOT RENDER PAST THE FRONT FLANGES, the finished render surface must be flush with the front flanges, otherwise the door will not work properly.

