


Amalfi Letterbox

You will need to install the Amalfi letterbox in a location that is easily accessible to Australia Post and couriers. This will typically be at your front boundary. The ideal height for the mail opening is 90-120cm from the ground.

146

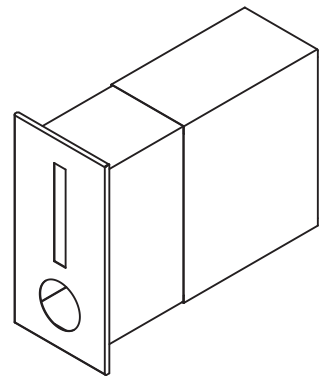


Installation



Installing into a brick wall

1. Open the back door, reach through and remove the front panel by unscrewing the nuts.
2. Build the brickwork up to the desired height and set the sleeve in place following these guidelines;
 - For plain brick walls, the front flanges should sit flush with the wall
 - For rendered walls, set the front flanges so they will sit flush with the finished rendered surface.
3. Complete the remaining brickwork around the letterbox. Finish any brick cleaning or rendering.
4. Once the brickwork and any rendering has been completed and cleaned, attach the front panel by following the instructions on the next page.

STUDS MUST SIT
TO LEFT SIDE OF
THE LETTERBOX

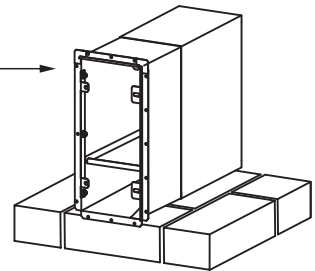

WARNING: DO NOT
RENDER PAST THE
FRONT FLANGES,
the finished render
surface must be flush
with the front flanges,
otherwise the door
will not work properly.

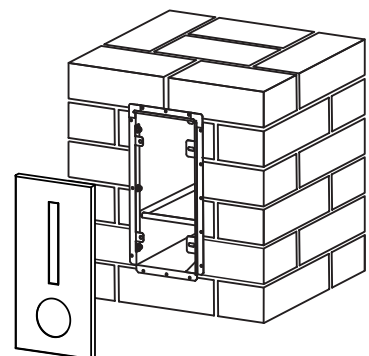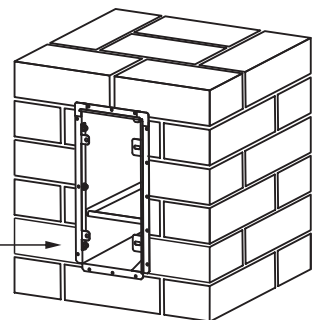

Attaching the Front Panel

5. Open the back door, reach through and secure the front panel using the nuts provided.

